

Operating Instructions

Thank you very much for choosing SLIK 515QF Tripod.

SLIK Corporation has designed your pan head to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use.

Please take a few moments to read this operating instructions carefully before use so that you can take full advantage of your Tripod's many fine features. Retain this operating instruction in case you might want to refer back to it.

⚠ Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

🚫 Prohibition


This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

Specification


| | |
|-------------------------------|-------------------------|
| Max. Operating height | 1,655 mm |
| Folded length | 760 mm |
| Max. Center column ext. | 180 mm |
| Cam balancer available weight | approx. 1~2 kgs |
| Tilt range | 90° (UP) and 90° (down) |
| Weight | 3,720g |

K882


Components

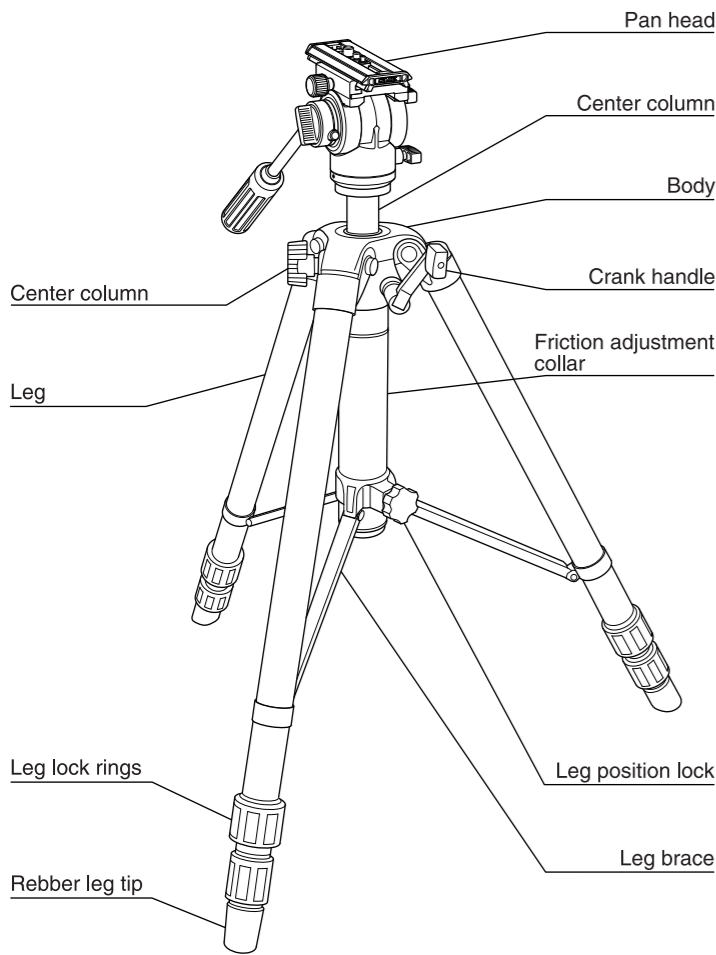


Pan head

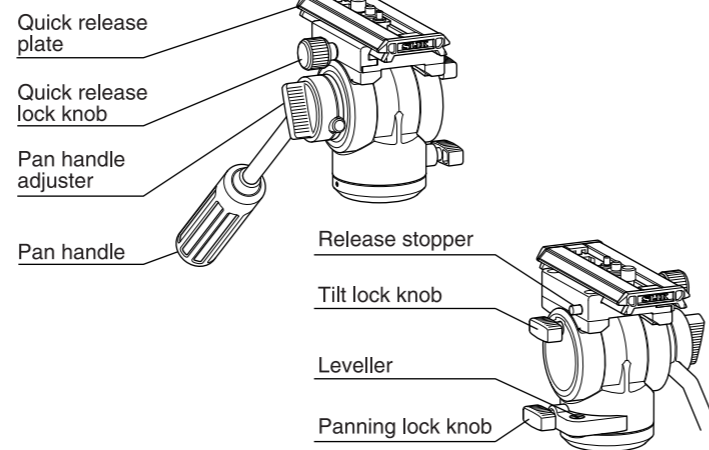

Quick release plate

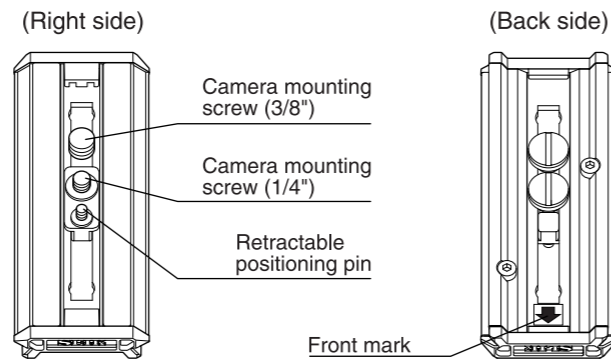

Equipment that can be used with this Tripod

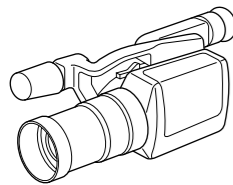


This product has been designed to handle equipment weighing under 2 kgs (4 lbs 6 oz). Do not overload.

Some equipments weighing under 2 kgs (4 lbs 6 oz), such as long lenses, may not balance well due to its weight distribution. In such case use a larger tripod.

This product adopted balancer system operated by coil springs. The balancer system is optimized a camera weighing between 1kg and 2kg. If your camera weight is out of the range, the balancer system may not perform well.

Setting up

⚠ Caution

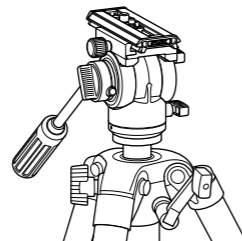

To prevent accidental equipment fall or tripod tipping over making sure all levers, knobs and handles on the tripod are securely tightened.


Carrying the Tripod

🚫 Prohibition




Carrying a tripod system left on can result in unexpected accidents. We, therefore, recommend you to remove your camera or other device equipment while you are carrying the tripod.

How to adjust an angle of pan handle

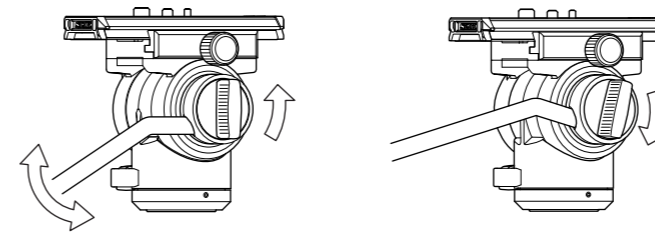


To adjust an angle of the pan handle, loosen the Pan handle adjuster until pan handle can be moved up and down freely. Adjusting a the angle of pan handle, tighten the Pan handle adjuster when the angle is determined.

Using the pan head

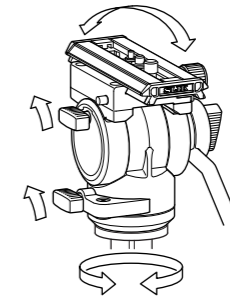


Loosen the Tilt lock knob to move forward and backward. Loosen the Panning lock knob for panning.


Attaching a Camera

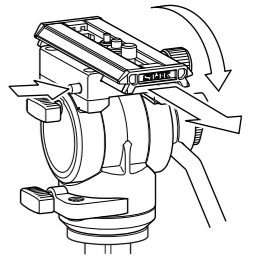

Turn the Quick release lock knob once and remove the Quick release plate to direction of arrow in picture.

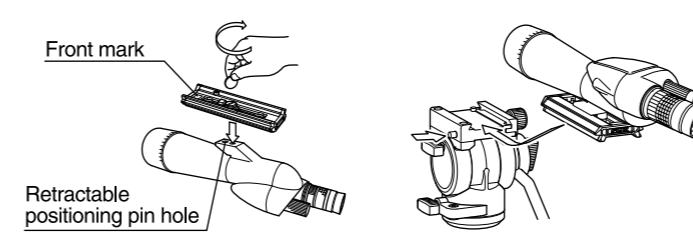


Set the front mark of the Quick release plate. Set a camera screw fitting the tripod attachment screw of a video camera by using coin, etc. It must be thrust firmly. When a Retractable positioning pin attachment hole is in the equipment, please screw in a camera screw after uniting a video boss.

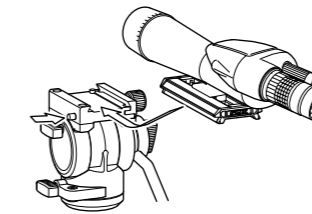


Please insert the Quick release plate in a Camera platform from the direction of an arrow while you are pushing the Release stopper. When the Release stopper is released, a Quick release plate stops moving. Please fix the Quick release knob in total in the good position of balance.

How to remove the head

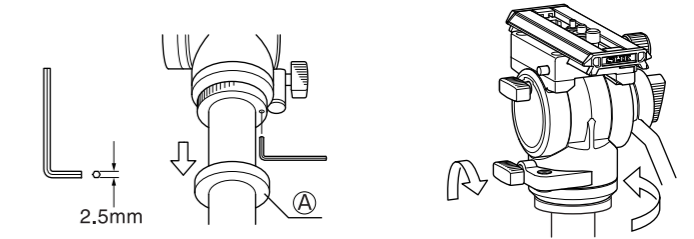


1. Move the Center column up, then move down the rubber ring (A) down to the arrow.
2. Loosen the screw of the bottom of the head with hexagon wrench of 2.5mm dia. (Hexagon wrench optional)
3. Lock the screw pan and turn the head clockwise for removing the head.

How to adjust a level of pan head

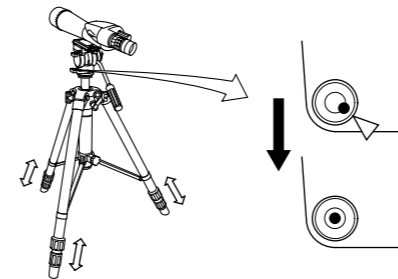


Adjust each leg length to put an air bubble into red circle. Then adjust the Quick release plate where a whole tripod is well balanced. Do not loosen Panning lock knob until adjusting leg length and the quick release plate. This caused a head turns their own weight and can be damaged.

Extending the Tripod legs

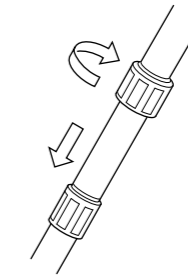


Rotate a Leg lock ring 180 degrees, the leg pipe can be extended or shortened.

How to open and close the Tripod legs

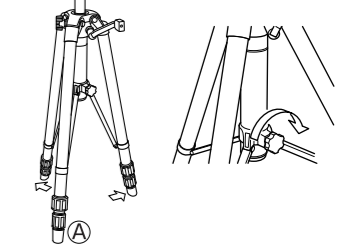

Extend legs by loosening the leg lock rings, pulling legs out to desired length. With a leg resting on the floor, raise the other two legs and pull them out to open the tripod. After opening, turning Leg position lock knob clockwise.

Elevating the Center column

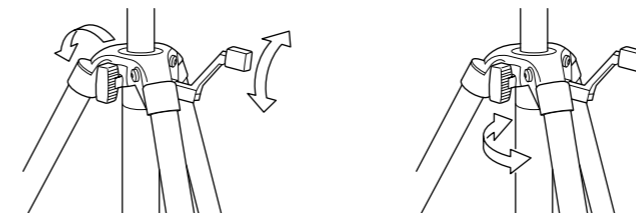

The Center column (elevator) will be going up and down when the Center column stopper is loosened and the Crank handle is turned. Please tighten the Center column stopper before leaving your hand off from the Crank handle. Unexpected fall of the Center column can be prevented.

The tension of the Center column can be adjusted by turning the Center column tension adjustment tube.

Care of the Tripod

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.

Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and ad vanced notice.

SLIK CORPORATION
853 Kayama, Hidaka City, Saitama 350-1231 Japan
Phone 81-42-989-2141, Fax. 81-42-985-0210 ©2008