

Specification

Folded length	520mm (20 1/2")
Max. Operating height	87mm (3 1/2")
Weight	1,190g (2lbs 10oz)

Operating Instructions

Thank you very much for choosing SLIK Pan head. SLIK Corporation has designed your pan head to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use. Please take a few moments to read this operating instruction carefully before use so that you can take full advantage of your Pan head's many fine features. Retain this operating instruction in case you might want to refer back to it.

⚠ Caution


This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

🚫 Prohibition


This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

L389

Components

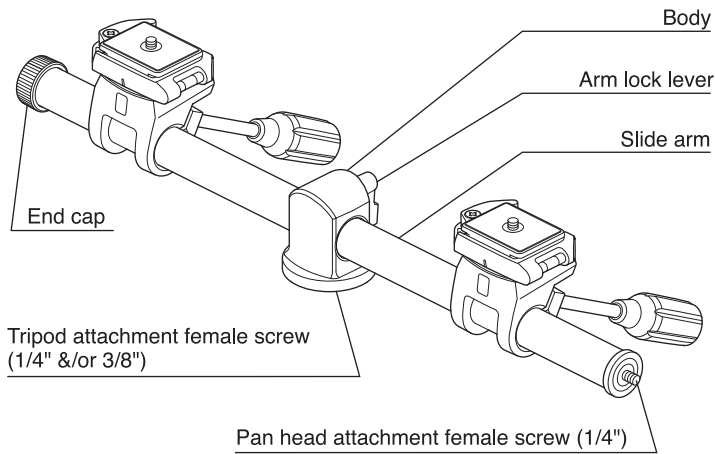

Pan head

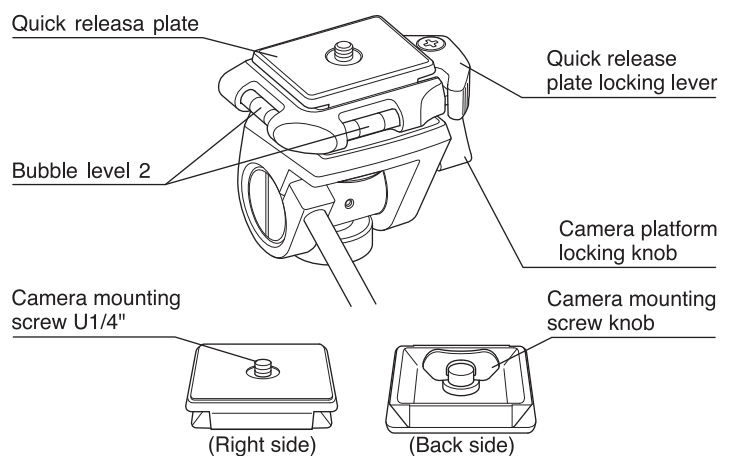


Equipment that can be loaded on this tripod

This product has been designed to handle equipment weighing under 4 kgs (8lbs 13oz). Do not overload. Some equipment weighing under 4 kgs (8lbs 13oz), such as long lenses, may not balance well due to its weight distribution. In such case, please use a larger tripod.

Carrying the tripod


🚫 Prohibition

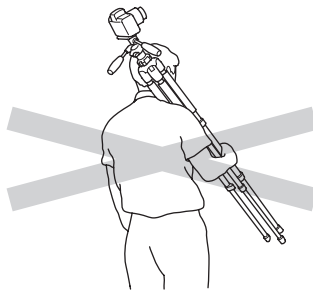

Carrying a tripod with a camera left on can result in unexpected accidents. We therefore, recommend you to remove your camera while carrying the tripod.

Setting up


⚠ Caution

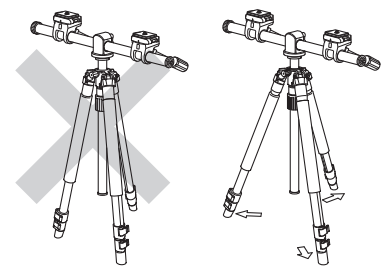

To Prevent accidental equipment fall or tripod tipping over making sure all levers, knobs and handles on the tripod are securely tightened, and that all three legs are opened all the way.


Pan head mounting post

🚫 Prohibition

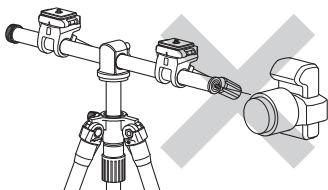


Do not attach camera directly to the threaded post of the center column. This may damage both camera and tripod.


How to attach to a tripod

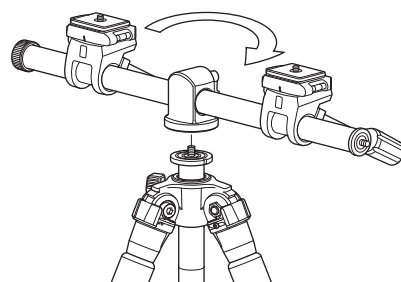

Set the head on the tripod's threaded post. Turn clockwise until comes to a stop.

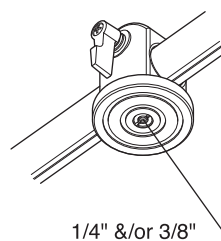


Arm lock lever

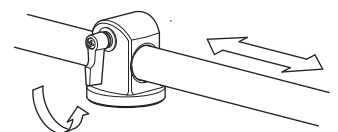


The arm can be slide when the arm lock lever is unlocked. When a position is determined, lock the arm lock lever firmly.


Attaching a camera

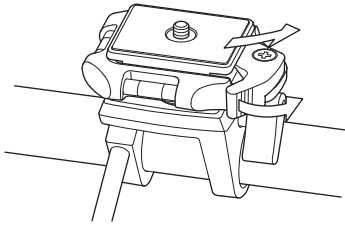

To remove the quick release plate, turn the quick release plate locking lever. In this case, please do not put the lock lever back by force as it has been stood by the stopper.

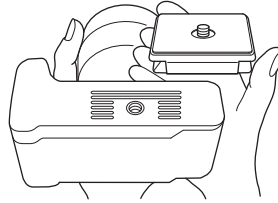


Insert the camera mounting screw on the quick release plate in the place of the tripod attachment screw of your camera. Turn the camera mounting screw knob and fix firmly.

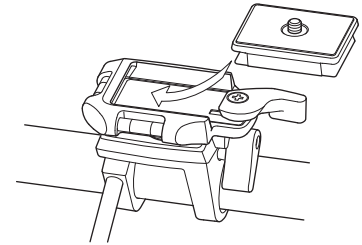


To attach the plate, slide into quick release plate slantways. It will be closed automatically after attaching.

Using the pan head

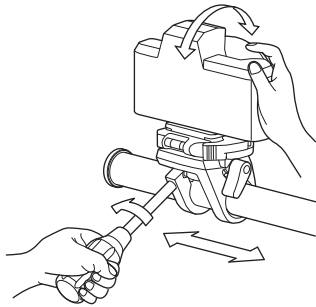


When you unlock the handle, your camera is free to move up and down. When the pan & tilt handle is unlocked, you can pan & tilt simultaneously.

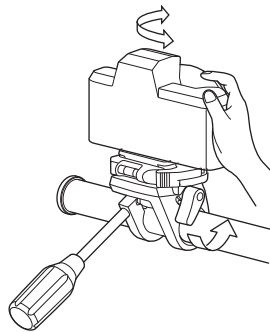


When you unlock the camera platform locking knob, raise the knob it to the vertical "release" position. The camera can be free to rotate.

⚠ Caution

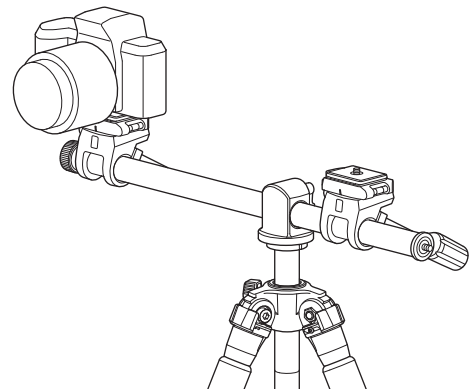


When the arm is stretched to the one direction, a tripod can lose the balance easily and may tip over. To prevent this, set your camera close to the body.

Attaching the pan head

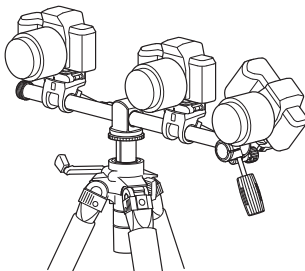


To mount the third equipments, attach another heads (sold separately) to end of the slide arm. Please make sure not to exceed maximum loading weight for your tripod.

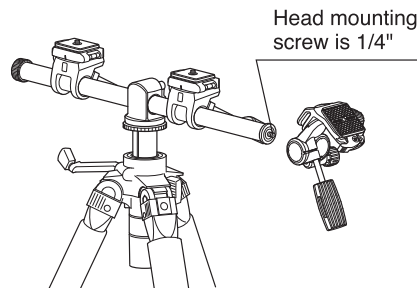

Attach a tripod head to the head mounting screw. The head mounting screw is 1/4".

⚠ Caution

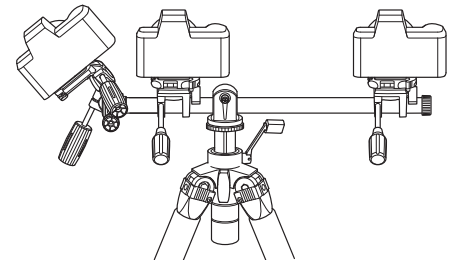

The tripod may be easily tipped over when the overall balance is broken. Pay an attention for a position of a tripod head, equipment weight and the arm length so the overall balance is always well.

Care of the pan head

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.

