 
 


Using the center column

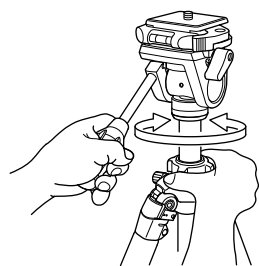 


Hold the pan head with one hand. Loosen the center column stopper and the center column locking collar with the other hand. Raise or lower pan head to desired height. While maintaining a hold you desired height of the pan head, tighten the locking collar and the stopper.

Caution
Prohibition

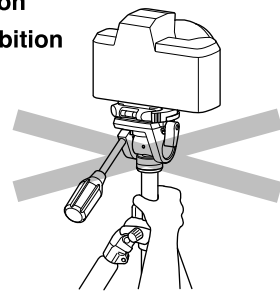


You may be injured by a sudden fall if you remain pan head without tightening up locking collar. Make sure to turn the locking collar with your hand on the side of the collar.

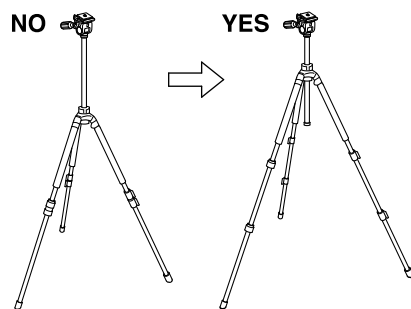


To avoid unnecessary camera vibrations, try to keep the center column height to a minimum. Also use the larger legs first when extending the legs.

 
Inverting the center column

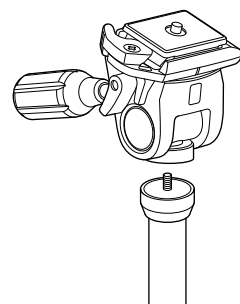

 
Always remove the pan head first before replacing the Center column.

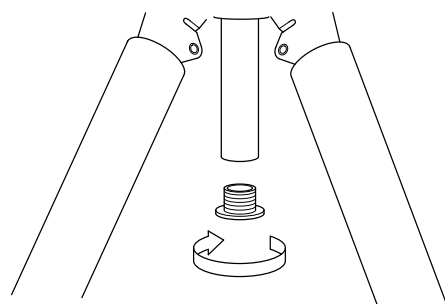

 Remove the center column base stopper from the bottom of the center column.

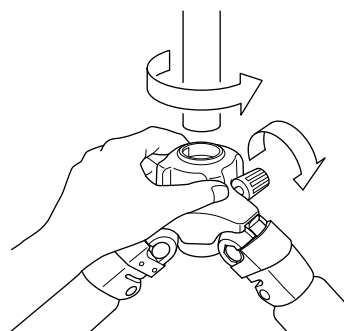


 Loosen the center column stopper and the locking collar, and then pull out the center column.

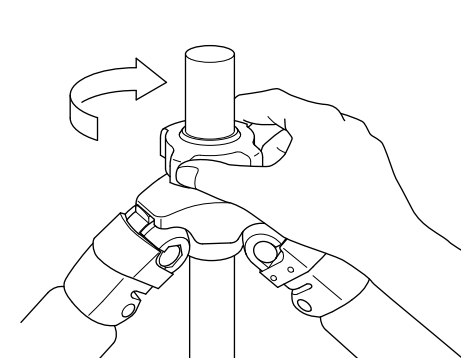


Insert the center column from lower side of main body, and tighten the locking collar and the center column stopper.

 Caution

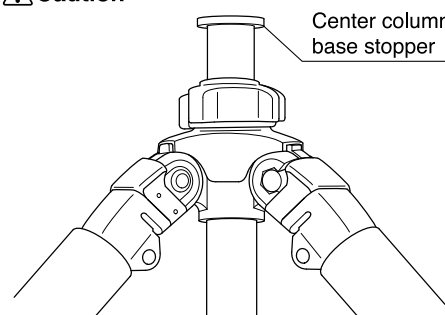

 Always be sure to return the center column base stopper back on the center column. This prevents the center column pulled out accidentally.

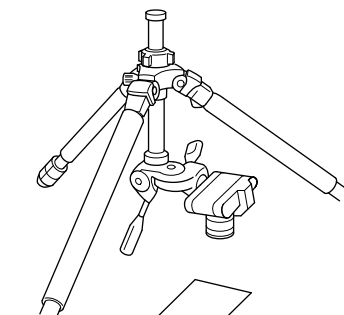

By inverting the center column, it is possible to do copy, and close up work.

Care of the Tripod

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.



SLIK®

PRO 500EZ Tripod

Operating Instructions

Thank you very much for choosing SLIK PRO 500EZ Tripod. The SLIK Corporation has designed your tripod to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use.

Please take a few moments to read these operating instructions carefully before use so that you can take full advantage of your Tripod's many fine features. Retain this operating instruction sheet in case you might want to refer back to it.

Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

Prohibition


This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

Specification


Length folded	690mm (27 1/6")
Max. operating height	1,626mm (64")
Max. center column ext.	260mm (10 1/4")
Weight	2.55kg (5lbs 10oz)

K024-1

 Components

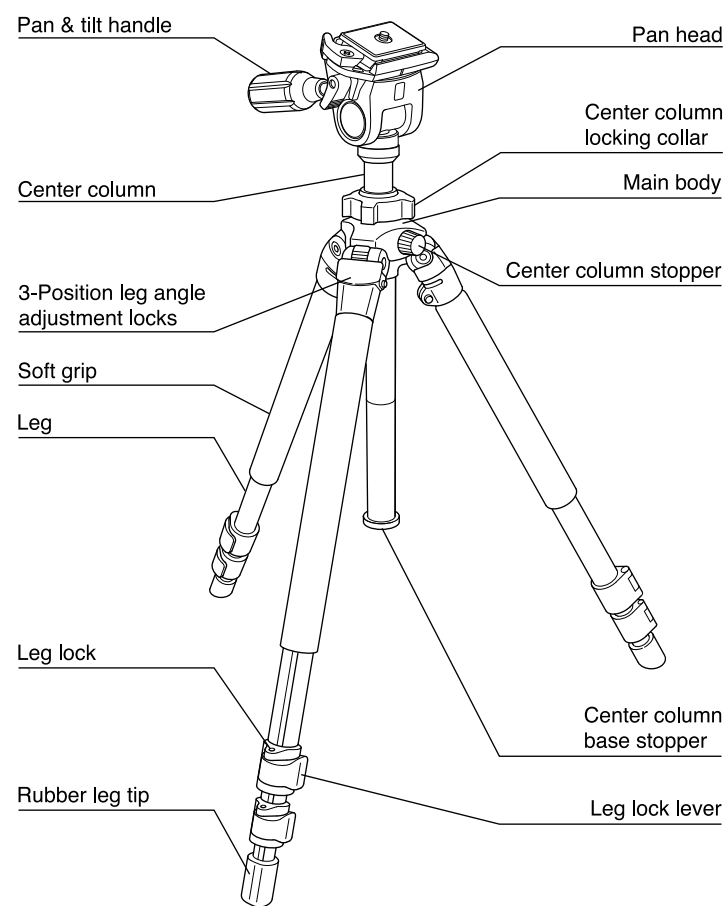

Pan head

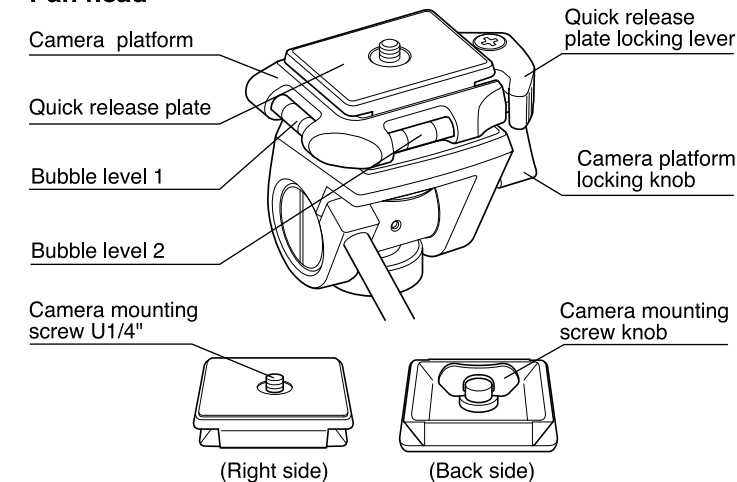 


Equipment that can be loaded on this tripod

This product has been designed to handle equipment weighing under 6 kgs (13 lbs 3 oz). Do not overload. Some equipment weighing under 6 kgs (13 lbs 3 oz), such as long lenses, may not balance well due to its weight distribution. In such case, please use a larger tripod.

Optional accessory

Long Pan Handle
Cat. No. 618-797
Length 7.95in. (202mm)

 this accessory pan handle is 2.75in. (70mm) longer than the included pan handle for easier movements with spotting scopes and binoculars.




Caution

Soft grip is consumption and cannot be used permanently. Please replace it whenever ragged.

Pan head mounting post

 Prohibition

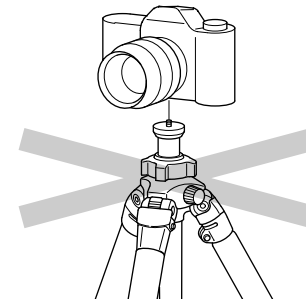

Do not attach a camera directly to the attachment screw of the center column. This may damage both your camera and tripod.

Setting up

Caution

 
Prohibition



To prevent accidental equipment fall or tripod tipping over making sure all levers, knobs and handles on the tripod are securely tightened, and all three legs are opened all the way.

Carrying the tripod

Prohibition

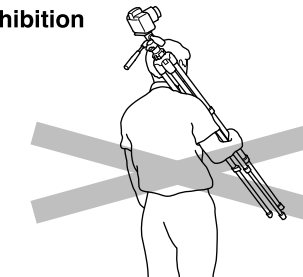


Carrying a tripod with a camera left on can result in unexpected accidents. We, therefore recommend you to remove your camera while you are carrying the tripod.

Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.


SLIK CORPORATION
853 Kayama, Hidaka City, Saitama 350-1231 Japan Phone 81-42-989-2141, Fax. 81-42-985-0210 ©2010

Printed in Thailand

 Attaching a camera

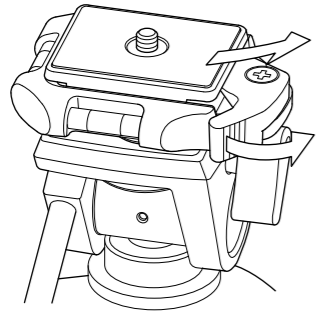


 To remove the quick release plate, turn the quick release plate locking lever. In this case, please do not put the lock lever back by force as it has been stood by the stopper.

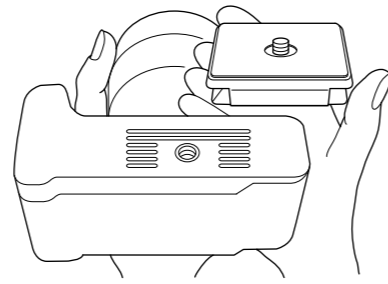


Insert the camera mounting screw on the quick release plate in the place of the tripod attachment screw of your camera. Turn the camera mounting screw knob and fix firmly.

 
How to get vertical position (Continued)

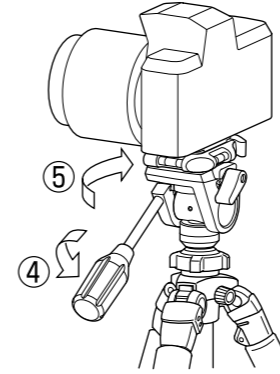

 
4. Loosen pan & tilt handle for your camera to get the front. 5. Turn the whole of pan & tilt handle.

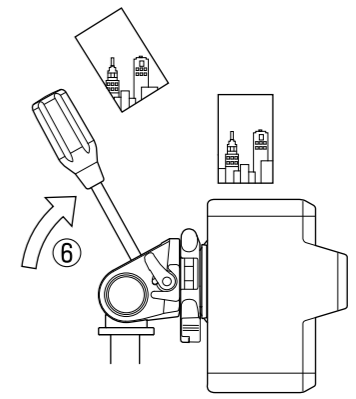

 6. Adjust pan & tilt handle to get vertical position.

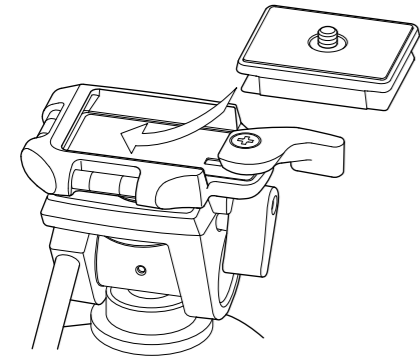


 To attach the plate, slide into quick release plate slantways. It will be closed automatically after attaching.

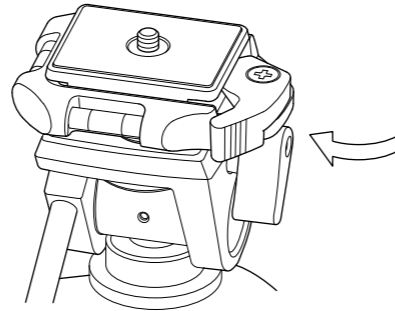


Fasten the plate locking lever on tightly. It will be certainly fixed.

 Removing the head from the center column

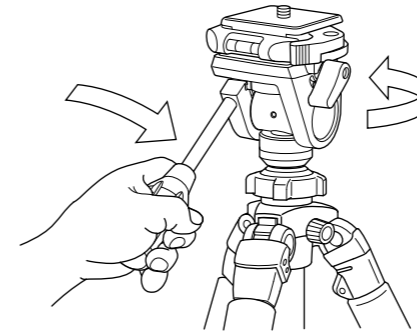


 Use the following instructions if you wish to change heads or attach accessories. Tighten the pan & tilt handle. Turn the pan & tilt handle. Turn counter-clockwise to loosen.

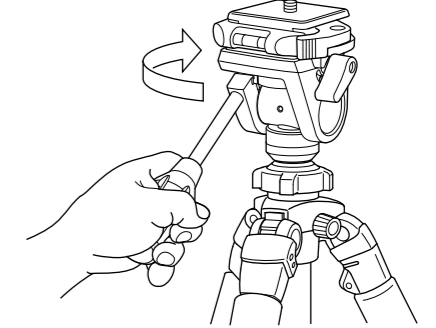


Set the new head or accessory on the tripod's threaded post. Turn clockwise until it comes to a stop. Tighten the pan & tilt handle and turn clockwise slightly more.

 Using the pan head

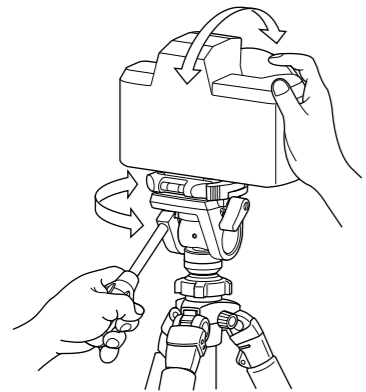


 When you unlock the handle, your camera is free to move up and down. When the pan & tilt handle is unlocked, you can pan & tilt simultaneously.

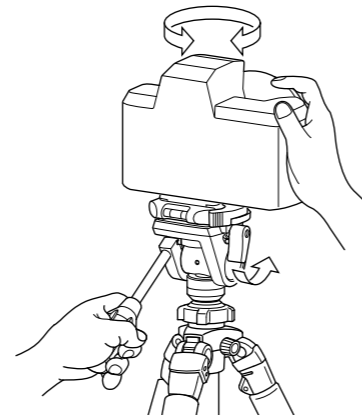


When you unlock the camera platform locking knob, raise the knob to the vertical "release" position. The camera can be free to rotate.

 Three position adjustable legs

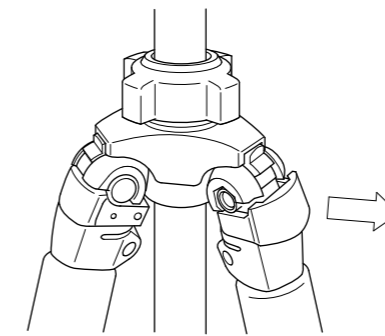


To change the angle of each leg, close the leg slightly, and then pull the leg angle adjustment lock out. There is a choice of two other angle positions.

 Caution

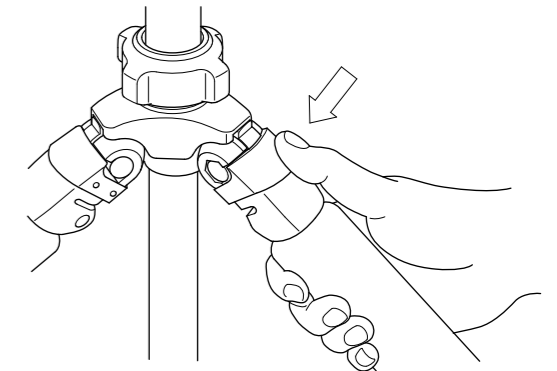


After choosing the desired leg angle, securely push in the adjustment lock.

 How to get vertical position

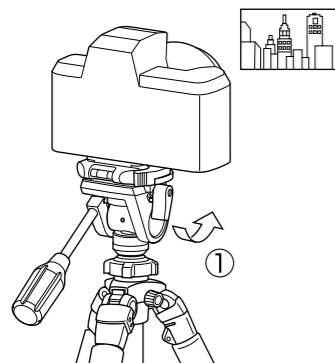


 1. Loosen camera platform locking knob.

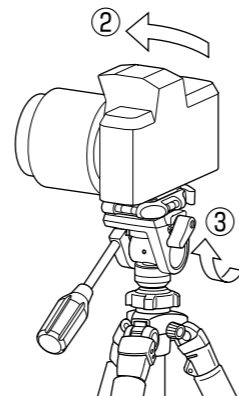


2. Turn your camera to the side. 3. Tighten camera platform locking knob.

 Extending the tripod legs

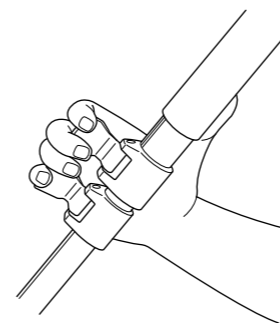

Flip up the leg lock lever to extend or shorten any of the individual leg sections to the desired length. Press the leg lock lever flush against the leg to lock.

 How to get low position shots

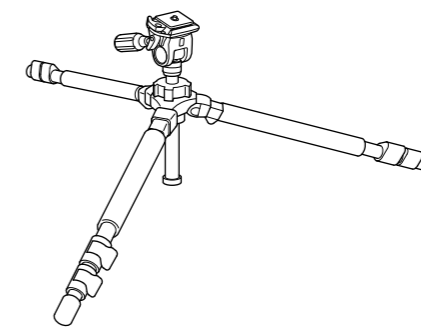

Remove the center column base stopper. Then remove the lower part of center column. Put the center column base stopper in from the upper part of center column.