

Operating Instructions

Thank you very much for choosing SLIK SPRINT PRO II Tripod. The SLIK Corporation has designed your tripod to be a sturdy, rugged and dependable product that will provide you with many years of satisfactory use.

Please take a few moments to read these operating instructions carefully before use so that you can take full advantage of your Tripod's many fine features. Retain this operating instruction sheet in case you might want to refer back to it.

⚠ Caution


This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

🚫 Prohibition

This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

K114

Components

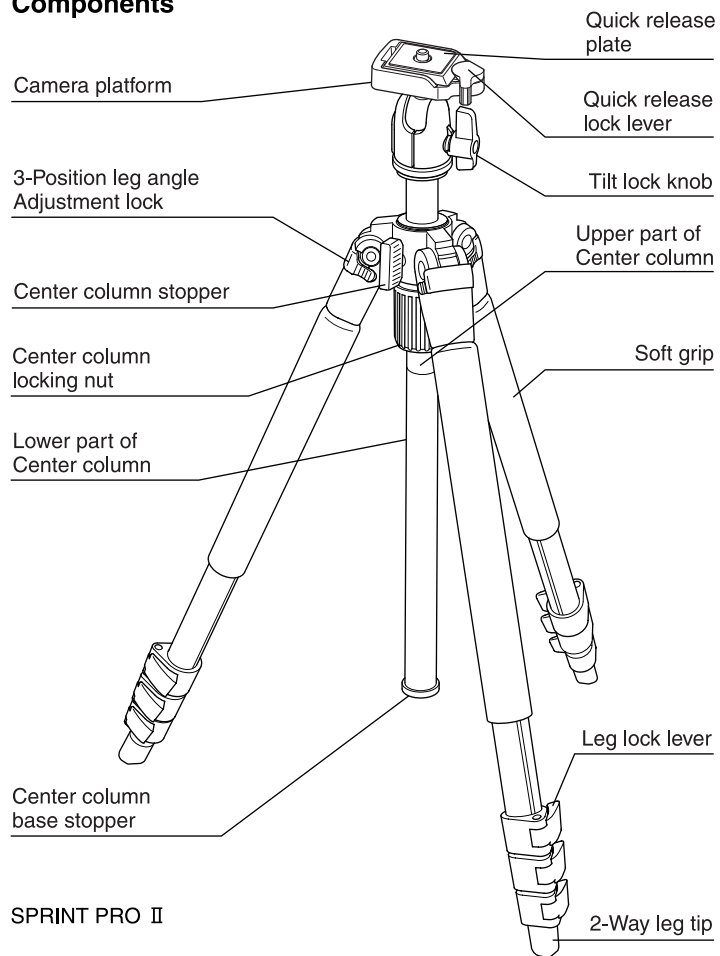

SPRINT PRO II


⚠ Caution

Soft Grip is consumption and cannot be used permanently. Please replace it whenever it is ragged.


Attaching the camera to the Quick release platform

⚠ Caution

To remove the Quick release plate, turn the Quick release plate locking lever. In this case do not put the lock lever back by force as it has been stood by the stopper.

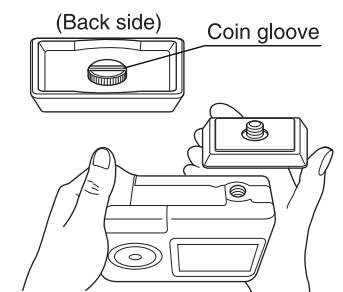


Insert the Camera mounting screw on the Quick release plate in the place of the tripod attachment screw of your camera. Turn the Camera mounting screw knob and fix firmly.

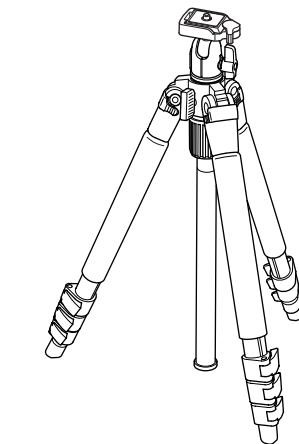

SPRINT MINI II

Carrying the Tripod

🚫 Prohibition

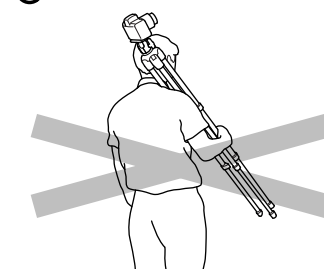

Carrying a tripod with a camera left on can result in unexpected accidents. We therefore, recommend you to remove your camera while you are carrying the tripod.

Specification

SPRINT PRO II
 Folded length 470mm
 Max. operating height 1,615mm
 Max. center column ext. 300mm
 Weight 940g


SPRINT MINI II
 Folded length 350mm
 Max. operating height 1,090mm
 Max. center column ext. 210mm
 Weight 780g

Equipment that can be loaded on this Tripod

This product has been designed to handle equipment weighing under 2 kgs (4 lbs 6 oz). Do not overload. Some equipments weighing under 2 kgs (4 lbs 6 oz), such as long lenses, may not balance well due to its weight distribution. In such case use a larger tripod.


Setting up

⚠ Caution

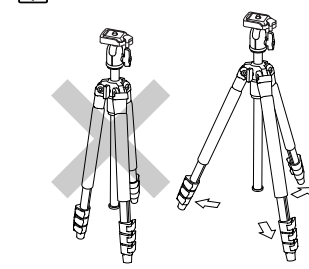


To prevent accidental equipment fall or tripod tipping over making sure all levers, knobs and handles on the tripod are securely tightened. And all three legs are opened all the way.

Using the Pan Head

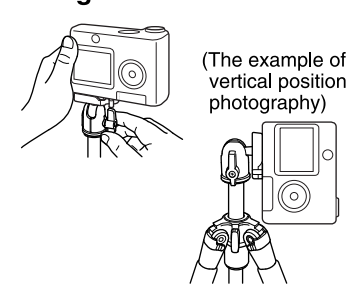


While you are holding the camera, loosen the Tilt lock knob. You can move Camera Platform and Base Plate freely. **Note:** For vertical photos the Camera platform can be tilted 90 degrees in either direction.

How to use the Center column

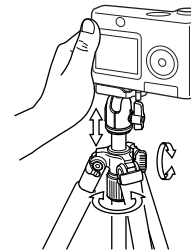


Loosen the Center column stopper while you are holding the Pan head. Then loosen the Center column locking nut. When you determined your desired height, tighten the both of the Center column stopper and the Center column locking nut firmly before you keep your hands away from the Pan Head.

Three position adjustable legs

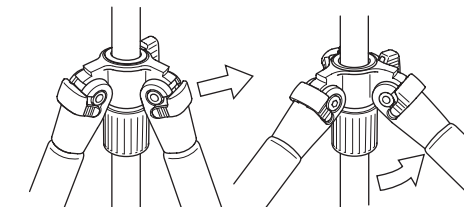


To change the angle of each leg, close the leg slightly. Then pull the 3-position leg angle adjustment locks. There is a choice of two other angle positions.

⚠ Caution

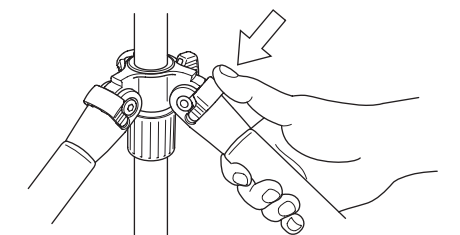


After choosing the desired leg angle, securely push the Adjustment lock.

How to get low position shots

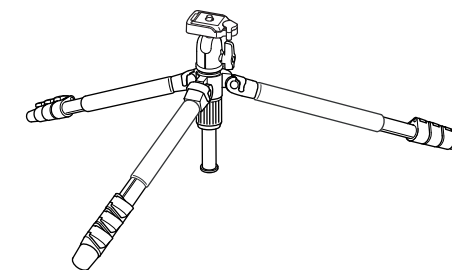


You can get lower height as shown the above.

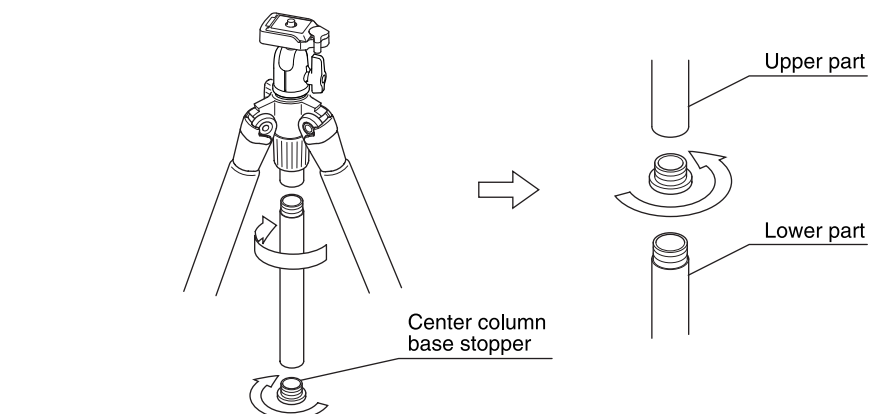

Remove the Center column base stopper. Then remove the Lower part of Center column.


Put the Center column base stopper in to the Upper part of Center column.

Extending/Folding of Tripod legs

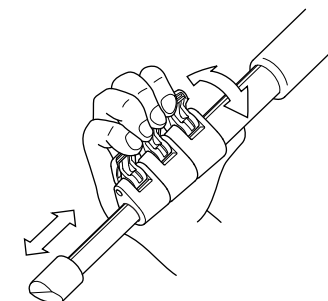


Flip up the Leg lock lever to extend or shorten any of the individual leg sections to the desired length. Press the leg lock lever flush against the leg to lock.

Invertible Center column

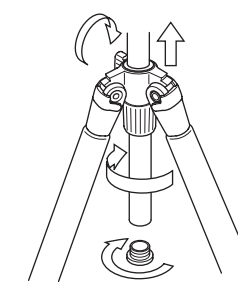

It can be used for digital copy/or close-up photography when a Center column is inserted from the bottom. Remove a Center column base stopper. Then loosen Center column stopper and Center column locking nut.

⚠ Caution

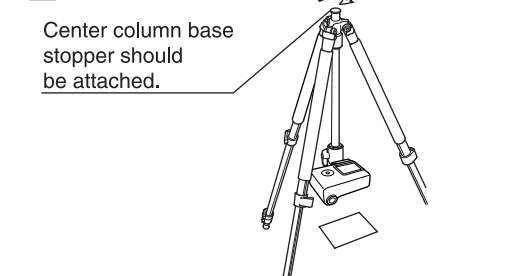

Center column base stopper should be attached. Insert a Center column from the bottom. Tighten a Center column stopper and Center column locking nut firmly. Please also make sure to attach a Center column base stopper for fall prevention.

Care of the Tripod

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.



Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.