

PRO POD 382CF

Operating Instructions

Thank you very much for choosing SLIK PRO POD 382CF. The SLIK Corporation has designed your tripod to be a sturdy, rugged, dependable product that will provide you with many years of satisfactory use.

Please take a few moments to read this operating instruction carefully before use so that you can take full advantage of your Monopod's many fine features.

Retain this operating instruction in case you might want to refer back to it.

⚠ Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

⊘Prohibition

This prohibited icon refers to information pertaining to prohibited contents. Please refer to instructions closely to avoid accidents.

Specification

Max. operating height 1,632 mm

(64 1/4")

Folded length 507 mm


(20")

Camera platform diameter 52 mm

(2")

Weight 430 g (15 oz)

M524

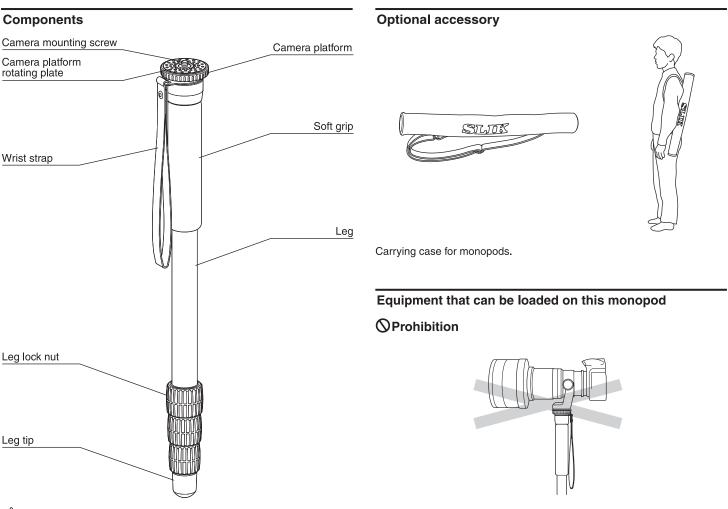

. Caution

Soft grip is consumption and cannot be used permanently. Please replace it whenever ragged.

In case of the shock given to

Carrying the monopod

⊘Prohibition

5 kgs (11 lbs).

Do not overload.


Carrying a monopod with a camera left on can result in unexpected accidents.

We recommend you to remove your camera while carrying the monopod.

Clamp head

This product has been designed to handle equipment weighing under

OProhibition

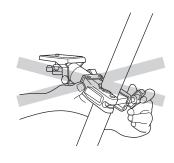

Do not use an optional clamp head for a carbon fiber monopod. The pipe may be damaged.


_Caution

monopod by force.


When the shock has been given to the monopod &/or leg such as falling down, check well whether there are cracks, flaws, etc. on the pipes or not. When you find some cracks, flaws, etc. on the pipes, stop to use it and ask to repair. It may be wounded when some of fibers came out from the pipes. In that case do not touch it.

Attaching a camera



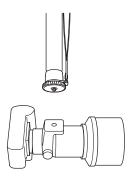

Hold the camera firmly, and screw the monopod into tripod socket. Always check the screw engagement, and rotate the monopod slowly and carefully in the beginning.

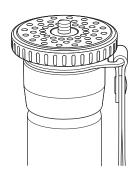


The camera platform rotating plate will not damage the camera base. It acts as a washer, to give the camera a secure grip.

Extending the legs



When you extend the leg, please proceed from the upper section. When you fold the leg, please proceed from the lower section. It will be steady to grip the upper part of pipe just above the lock nut.


⊘ Prohibition

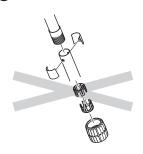

Do not remove the nut and take out pieces. If they has been removed, insert the pieces as per the above specification.


Stopper Stopper Stopper Stopper

Match the space between the stoppers and jutting inside the upper pipe when the pipe is connecting.

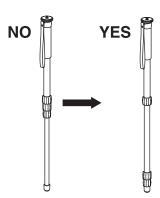


Note: Extending the larger leg first to give you better support. Extend leg from the top. Fold leg from the bottom.

Soft grip

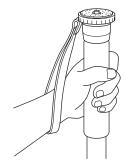

The large soft grip gives you a wide area to grasp and keeps your hands from slipping. It also stays warm and easy to work with even in the coldest weather.

Wrist strap

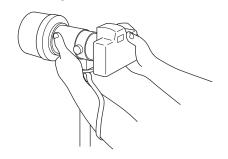

The Wrist strap rotates freely.
As a safety measure it is advisable to hold the camera through the wrist strap.

Optional accessory-Ball Head



It is recommendable to use this monopod together with ball heads (such as the variable ball head, small ball head, etc.) so that your action range of camera will be expanded. Please use it according to your cameras and lenses.

Care of the monopod

- DO NOT apply any grease or oil to this product.
- · Clean with a mild detergent and a soft cloth only.
- DO NOT use close to flame. Avoid extreme heat.



Slik corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.